



Feiyu SCORP-2 Camera Compatibility (Bluetooth Control)

Brand	Camera Model	Bluetooth	Capture Photo	Start/Stop Record	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Bluetooth Firmware Version	Remark
Sony	RX100 VII (RX100 M7)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_Y103	1. New to set up the camera's bluetooth: #Menu=Network=>Bluetooth Settings=>Bluetooth Function=>On #Menu=>Bluetooth Set Ctrl=>On #Menu=>Bluetooth Settings=>Pairing 2. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 3. Please switch photo / video mode on camera manually.
	A6100	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_Y104	
	A6400	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_Y104	
	A6700	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_Y103	
	ZV-H2	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_Y103	1. New to set up the camera's bluetooth: #Menu=Network=>Bluetooth Settings=>Bluetooth Function=>On #Menu=>Bluetooth Set Ctrl=>On #Menu=>Bluetooth Settings=>Pairing 2. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 3. Due to limitations of some camera systems, camera control cannot be achieved in only Bluetooth pairing state. You must also ensure that the Bluetooth remote control is on. 4. Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture, shutter, ISO by connecting with shutter release cable. Please make sure bluetooth is disconnected. 5. Please switch photo / video mode on camera manually.
	A7C1 (A7C M2)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_Y104	
	A7R5 (A7R5)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_Y104	
	A7 SIII (A7 S3)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.10	Bluetooth_Y103	
	ZV-1	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Bluetooth_Y105	
	A7C	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_Y105	
	A7R4(A7RIV)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	Bluetooth_Y105	
	A74(A7IV)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_Y105	
ZV-E10	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_Y105	1. New to set up the camera's bluetooth: #Menu=Network=>Bluetooth Settings=>Bluetooth Function=>On #Menu=>Bluetooth Set Ctrl=>On #Menu=>Bluetooth Settings=>Pairing 2. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 3. Please switch photo / video mode on camera manually.	
Canon	EOS 200D II	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.0.3	Bluetooth_Y104	1. Wireless communication settings=>Bluetooth function=>Remote 2. Wireless communication settings=>Bluetooth function=>Pairing (If Pairing" is gray, please click "Check/clear connection info" below to clear Bluetooth connection, then pairing again.) 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Switching the camera to M mode(photo mode) Single tap the Q/SET button=>Drive mode=>Self-timer: 10 sec/remote or Self-timer: 2 sec/remote 5. Switching the camera to video mode(Video) =>Remote control=>Enable 6. Power saving=>Auto power off=>OFF 7. Please switch photo / video mode on camera manually.
	EOS R50	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.1.0	Bluetooth_Y103	1. Wireless communication settings=>Bluetooth function=>Remote (If Pairing" is gray, please click "Check/clear connection info" below to clear Bluetooth connection, then pairing again.) 2. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 3. Switching the camera to M mode(photo mode) Single tap the Q/SET button=>Drive mode=>Self-timer: 10 sec / Self-timer: 2 sec 4. Switching the camera to video mode(Video) =>Remote control=>Enable 5. Power saving=>Auto power off=>Disable 6. Please switch photo / video mode on camera manually.
	EOS R	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.8.0	Bluetooth_Y103	1. Wireless communication settings=>Bluetooth function=>Remote 2. Wireless communication settings=>Bluetooth function=>Pairing (If Pairing" is gray, please click "Check/clear connection info" below to clear Bluetooth connection, then pairing again.) 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Switching the camera to M mode(photo mode) Single tap the Q/SET button=>Drive mode=>Self-timer: 10 sec / Self-timer: 2 sec 5. Switching the camera to video mode(Video) =>Remote control=>Enable 6. Power saving=>Auto power off=>Disable 7. Please switch photo / video mode on camera manually.
	EOS R6	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.8.2	Bluetooth_Y104	1. Wireless communication settings=>Bluetooth settings=>Enable 2. Wireless communication settings=>Wi-Fi/Bluetooth connection=>Connect to Wireless Remote Add a device to connect to 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Switching the camera to M mode(photo mode) Single tap the Q button=>Drive mode=>Self-timer: 10 sec/remote or Self-timer: 2 sec/remote 5. Switching the camera to video mode(Video) =>Remote control=>Enable 6. Power saving=>Auto power off=>Disable 7. Please switch photo / video mode on camera manually.
	EOS R7	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.3.1	Bluetooth_Y104	1. Wireless communication settings=>Bluetooth settings=>Enable 2. Wireless communication settings=>Wi-Fi/Bluetooth connection=>Connect to Wireless Remote Add a device to connect to 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Switching the camera to M mode(photo mode) Single tap the Q button=>Drive mode=>Self-timer: 10 sec/remote or Self-timer: 2 sec/remote 5. Switching the camera to video mode(Video) =>Remote control=>Enable 6. Power saving=>Auto power off=>OFF 7. Please switch photo / video mode on camera manually.
	EOS R10	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.2.0	Bluetooth_Y104	1. Wireless communication settings=>Bluetooth settings=>Enable 2. Wireless communication settings=>Wi-Fi/Bluetooth connection=>Connect to Wireless Remote Add a device to connect to 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Switching the camera to M mode(photo mode) Single tap the Q button=>Drive mode=>Self-timer: 10 sec or Self-timer: 2 sec 5. Switching the camera to video mode(Video) =>Remote control=>Enable 6. Power saving=>Auto power off=>Disable 7. Please switch photo / video mode on camera manually.
	EOS R50	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_Y104	1. Bluetooth settings=>Enable 2. Connect to Wireless Remote Add a device to connect to 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Power saving=>Auto power off=>Disable 5. Please switch photo / video mode on camera manually.
	EOS R5 C	Bluetooth	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.0.5.1	Bluetooth_Y105	1. Wireless communication settings=>Bluetooth settings=>Enable 2. Wireless communication settings=>Wi-Fi/Bluetooth connection=>Connect to Wireless Remote Add a device to connect to 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Tap Q button =>Drive mode=>Self-timer: 10 sec/remote or Self-timer: 2 sec/remote 5. Power saving=>Auto power off 6. Please make sure turn the global on with Photo mode
	EOS R50 Mark II	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.0.1	Bluetooth_Y105	1. Wireless settings=>Bluetooth settings=>Enable 2. Wireless settings=>Wi-Fi/Bluetooth connection=>Connect to Wireless Remote Add a device to connect to 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Switching the camera to M mode(Shooting setting=>Drive mode=>Self-timer: 10 sec/remote or Self-timer: 2 sec/remote 5. Switching the camera to video mode(Shooting setting=>Remote control=>Enable 6. Function settings=>Power saving=>Auto power off 7. Please switch photo / video mode on camera manually.
	EOS R9	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.6.0	Bluetooth_Y105	1. Wireless communication settings=>Bluetooth function=>Remote 2. Wireless communication settings=>Bluetooth function=>Pairing (If Pairing" is gray, please click "Check/clear connection info" below to clear Bluetooth connection, then pairing again.) 3. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 4. Switching the camera to M mode(photo mode) Single tap the Q/SET button=>Drive mode=>Self-timer: 10 sec/remote or Self-timer: 2 sec/remote 5. Switching the camera to video mode(Video) =>Remote control=>Enable 6. Power saving=>Auto power off 7. Please switch photo / video mode on camera manually.
Nikon	Z30	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.10	Bluetooth_Y104	1. Wireless remote(BL-L7) option=>Wireless remote control=>On 2. Global operation: Script left from the main interface =>Bluetooth setting=>turn on camera control button=>click the camera name to pairing. 3. Please switch photo / video mode on camera manually.

Notice: 1. "✓" Means Support this function. "✗" Means Do not Support.